





Package Contents ® Packungsinhalt ® Contenu ® Contenido del paquete ® 包装について ® 包装説明 ® 包装説明







Front View







6 x M3*4 Pan Head Screws for MB601V4KW-B (2 x screw for spare parts)

e use the included screws to ! Note: Pleas



Device Information • Geräteinformationen • Informations dispositif Información del dispositivo ● 本体説明 ● 機體說明 ● 机体说明

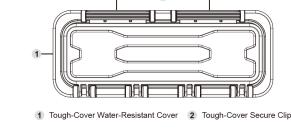

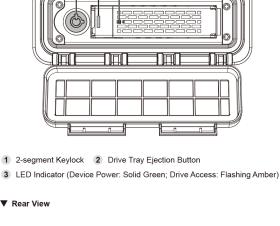

0 SFF-8639

3-1

3-5


Unsecured






3-6



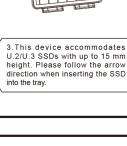

Use the included M3*4 flat head screws to install the drive onto the

tray.



• 设备安装步驟

M3*4 screws

Device Installation ® Installation eines Gerätes ® Installation du dispositif ® Instalación del dispositivo ® デバイス取付手順 ® 装置安装步驟


M3*4 Pan Head Screws



Note:
Prior to installing the MB601V4KW-B, please clean the case surface thoroughly, preferably using alcohol. This ensures the 3M adhesive adheres properly, providing essential water resistance. For the most effective waterproofing, apply the 3M adhesive in an environment with a temperature above 10°C. Keep in mind that peak adhesion is typically achieved within 72 hours post-application.

•

0

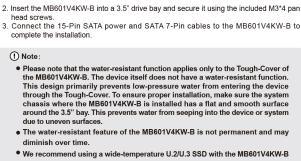

to ensure stable operation under extreme temperatures.