





MB602SPO-B 2 x 2.5" + (Ultra) S + (Ultra) Slim ODD





4 x 2.5" + (Ultra) Slim ODD





C Cremax Europe GmbH
Email: support@icydock.com
Weldenweg 21H, 47059 Duisburg, Germany

L Beyond Technologies UK Ltd
Email: info@beyondtech.co.uk
Unit B6, Halesfield 11, Telford, Shropshire, TF7 4PH, U.K.

















× 10



4 x M2*2.5 Screws for ODD

(2 x Screws for Spare Parts)

(2 x Screws for Spare Parts)

10 x M3*2.5 Screws for Device

10 x M3*4 Screws for 2.5" HDD / SSD (2 x Screws for Spare Parts)

× 10





Optional

Device Information • Geräteinformationen • Informations dispositif ▶ Información del dispositivo ● 本体説明 ● 機體說明 ● 机体说明



Front View


1 Drive Tray Ejection Button


Rear View

(MB602SPO-B)

(MB604SPO-B)





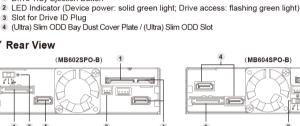

(E

(MB606SPO-B)

1

Œ



萨

- Push the drive tray ejection button to eject the drive tray.

3-1.3

3-1.5



Use the included M3*4 screws to secure the drive onto the tray, then flip the tray

back to the top side. Note:

MB604SPO-B

M3*4 screw

3-1.6

3-1.4



Insert the drive tray all the way into

Use the included M3*4 screws to secure

the drive onto the tray, then flip the tray

Use the included M3*4 screws to secure the drive onto the tray, then flip the tray

back to the top side.

back to the top side.

4-1.2

4-1.4

M3*4 screws

A Propo


The drive tray latch will pop open once the drive tray ejection button is pushed.

3-2.4

Please do not discard the removed screws,

Please do not discard the removed screws, as it is for SSD/HDD mounting purposes.

as it is for SSD/HDD mounting purposes.



3-2.5

the device.





笔记本光驱安装步骤



Unscrew the screw on the front panel to

Slim ODD
Ultra Slim ODD
M2*2.5 pan head scre

TOO mits

Use two M2*2.5 screws to secure slim

ODD onto the ODD bracket.

remove the ODD bracket.

To remove the ODD dust cover, push the tab to the right to unlatch. 4-1.3

4-1.5

Note:

◑

4 - 3.4

MB602SPO-B


4-1.1

(!) Optional: Ultra Slim ODD spacer installation for MB602SPO-B & MB604SPO-B Use the provided ODD spacer installation guide to correctly install the EVA foam spacer on top of the Ultra Slim ODD. Place the ODD spacer installation guide on top

Remove the ODD bracket from the

of Ultra Slim ODD (as shown in the picture). 2. Follow the ODD spacer installation guide and then attach the EVA foam on the Ultra Slim ODD.

4-1.6



To secure ODD device, tighten the screw

on the front panel.

illustrated in the following section. MB606SPO-B

Insert the ODD bracket back into

Use two M2*2.5 screws to secure slim ODD onto the ODD bracket

4-3.5

The Ultra Slim / Slim ODD installation of MB602SPO-B & MB604SPO-B

is similar to MB606SPO-B except step 4-1.4 and 4-1.5 which will be

Note: (!) In order to provide sufficient power to device, we suggest to use power cables that are not shared with other devices.

ICY DOCK reserves the right to change product specifications, components, or accessories without prior notice. For the warranty information, please visit www.icydock.com/warranty.php